

# IRD2

## Flux Capacitor IR Dongle


Just Add  
**Power**  
AV over IP Solutions

## Converts RS232 into an IR signal

The Just Add Power Flux Capacitor IR Dongle provides IR control of endpoint devices through the Just Add Power Omega and Ultra product lines. Conveniently powered through Decoder (Receiver) USB port.

### Connects to RS232 port on a Receiver or Transmitter

Use the Flux Capacitor IR Dongle combined with Just Add Power drivers to control all of your IR devices over a single IP connection. Each IR Dongle becomes an additional IR port on the control system.

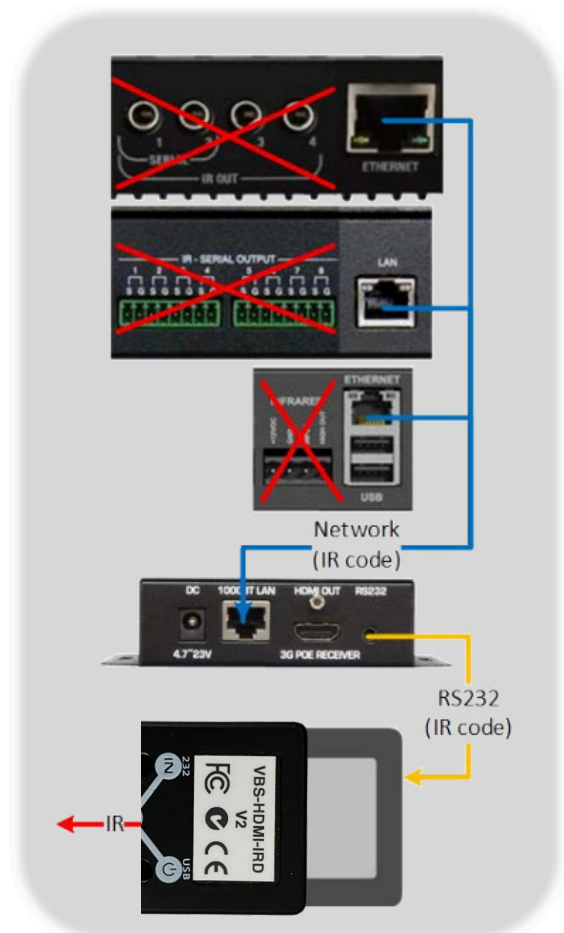


# IRD2

## Flux Capacitor IR Dongle

Just Add  
**Power**  
AV over IP Solutions

All measurements in millimeters (mm)

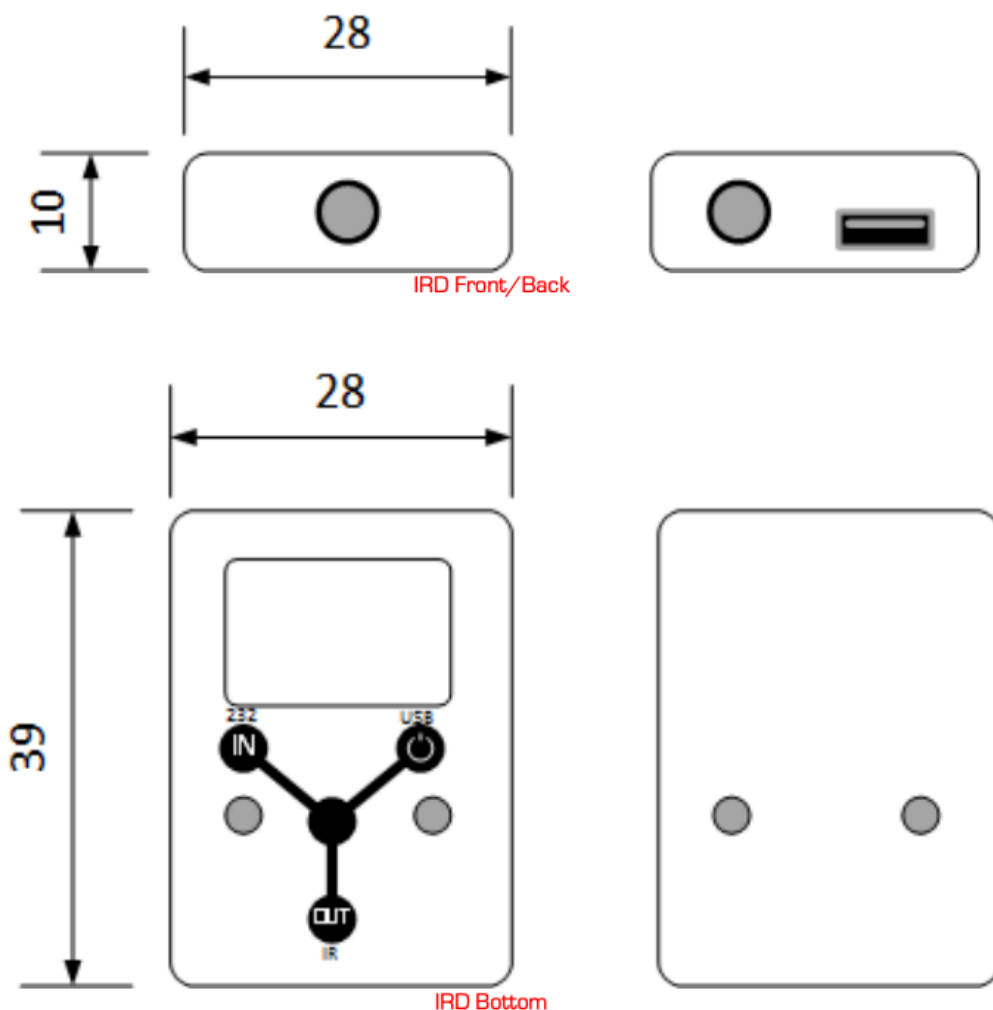

## Specifications

<b>Compliance</b>	RoHS/FCC/CE	<b>Ports</b>	USB micro (power) 3.5mm (IR Out) 3.5mm (Serial In)
<b>Overall Dimensions &amp; Weight</b>	39 x 28 x 10 mm 1.5" x 1.1 x 0.4" inch 28 g / 1 oz	<b>Power Supply (not included)</b>	DC5V, 0.5A minimum USB micro
<b>Operating Temp</b>	0-60 °C / 32-140 °F		